

duxtop

DUXTOP ELECTRIC BURNER

Instruction Manual

Model: ES-3103



Model: ES-3203



www.duxtop.com / www.thesecura.com

It is very important that you read all instructions carefully before you begin operating the appliance. Keep the instructions in case you need to reference them in the future.



Copyright © 2014 – Secura Inc. - All rights are reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

TABLE OF CONTENTS

COPYRIGHT NOTICE 1

TABLE OF CONTENTS 2

IMPORTANT SAFETY INSTRUCTIONS 3

PARTS IDENTIFICATION 4

HOW TO USE 5

IMPORTANT NOTICES 6

CLEANING AND MAINTENANCE 6

SPECIFICATION 7

MANUFACTURER’S LIMITED WARRANTY 8

IMPORTANT SAFETY INSTRUCTIONS

- Read the manual carefully before use.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Under no circumstances must the appliance be immersed in water or other liquid, or come into contact with such. Do not use the appliance with wet or moist hands.
- Before connecting of the appliance check that voltage indicated on the rating label corresponds the voltage in your home.
- The unit is built for continuous use. However, letting the cooktop cool down after every 1 hour's continuous operation will extend the product's life span.
- Do not use the appliance outdoors.
- Use the appliance only for the intended purpose.
- Prior to connecting or disconnecting plug from wall outlet, turn any temperature control to 'OFF'.
- Always remove the plug from the power supply whenever the appliance is not in use, before cleaning the appliance. Pull on the plug, not on the cord.
- In order to protect children from the dangers of electrical shock, never leave them unsupervised with the appliance. When selecting the location for your appliance, do so in such a way that children do not have access to the appliance. Take care to ensure the cord does not hang down.
- Never leave the appliance unsupervised. Switch off the appliance whenever you are not using it.
- Keep the appliance and the cord away from heat and moisture.
- Should the appliance become moist or wet, unplug the unit from the power supply immediately.

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug. If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not try to modify the plug in any way.

SHORT CORD INSTRUCTION

A short power cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the electrical rating on the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

PARTS IDENTIFICATION

Model: ES-3103



Model: ES-3203



1. Large cast iron burner, 1500W, 7.5 inch diameter.
2. Large cast iron burner, 1300W, 7.5 inch diameter.
3. Small cast iron burner, 500W, 6 inch diameter.
4. Temperature control knob
5. Heating indicator light
6. Cool touch handel

HOW TO USE

Before plugging in your duxtop electric burner, be sure the electric circuit is rated at 120V 60 Hz AC. Do not share a 120V electrical outlet with another electrical appliance.

There is one burner on ES-3103 rated at 1500W. There are two burners on ES-3203. The larger burner is rated at 1300W. The smaller burner is rated at 500W. Use the larger burner for cooking tasks that require high heat, such as boiling water. Use the smaller burner for simmering or warming.

1. Place the appliance on a flat, dry and heat-resistant surface. Leave at least 4 inch of space on all sides of the unit.
2. Turn the temperature knob to "OFF" position.
3. Place filled cookware on the cooktop. Do not heat the appliance without a filled pot on the cooktop.
4. Plug unit into electrical outlet. Turn temperature control knob from OFF position to desired setting. The appliance cycle on and off to maintain the setting temperature. The heating indicator light illuminates when the heating is on.
5. The appliance will be very hot. DO NOT touch the surface while in use or it has not cooled down completely.
6. When cooking is complete turn temperature control knob to OFF position.
7. Unplug the appliance when not in use and let it cool down.



IMPORTANT NOTICES

- DO NOT use unstable pan. Use pan with flat bottom to insure full contact with the hot plate for maximum heat efficiency. Do not use pans that are unstable and easily tipped.
- Do not touch stainless steel housing when the burner is in use. The surface can become very hot.
- The burner may smoke the first time it is used. It is not defective and the smoke will burn off within a few minutes.
- Do not leave the burner ON without any pots/pans on the plate.
- Avoid dropping any liquid on the plate for long-life performance.
- To quickly boil a large pot of water, close lid on the pot to retain heat.
- It can take a long time for the unit to cool down after the unit is turned off. Do not touch the unit until it is completely cooled down.
- Use the cool touch handle to move the unit around when the unit is cool.
- There is one burner on ES-3103 rated at 1500W. There are two burners on ES-3203. The larger burner is rated at 1300W. The smaller burner is rated at 500W. Use the larger burner for cooking tasks that require high heat, such as boiling water. Use the smaller burner for simmering or warming.

CLEANING AND MAINTENANCE

- Always unplug from wall socket before cleaning.
- Never immerse the appliance, cord or plug in water or other liquids.
- Clean the housing of the unit with a damp cloth. Never use harsh abrasive or steel wool pads on any part of the burner. Use washing-up liquid in case of hard stains.
- Do not use scratching cleaning agent.

SPECIFICATION

Model: ES-3103

Power supply	120V~ 60Hz
Rated power output	1500W

Mode: ES-3203

Power supply	120V~ 60Hz
Rated power output	1300+500W



Manufacturer's Limited Warranty

The Manufacturer of duxtop™ cooktop warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 1 year after date of purchase. Manufacturer of duxtop™ cooktop will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void when the product is used in a commercial or institutional use.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Manufactured by
Secura Inc.
Brookfield, Wisconsin. USA



duxtop

Manufactured by Secura Inc.
Brookfield, Wisconsin, USA
www.thesecura.com
CustomerCare@thesecura.com
Tel: 888-792-2360