 


SECURA®

Electric Gooseneck Kettle with Variable Temperature Control & Smart Memory

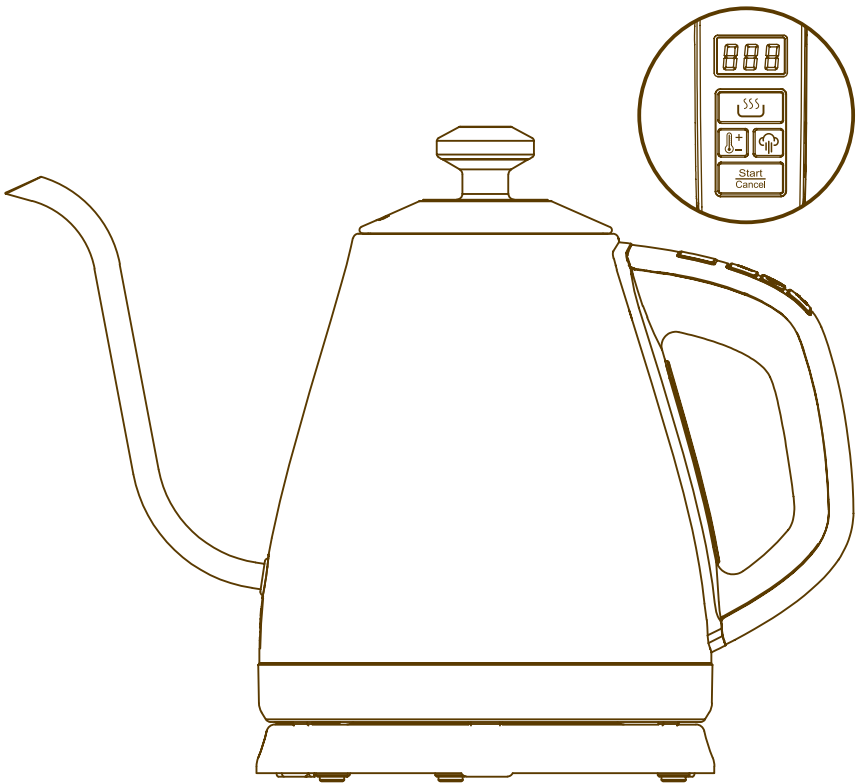

User Manual

Model: KE4012A



Welcome to the Secura Family!

Congratulations on being the proud owner of your new Secura product. We believe in manufacturing only the highest quality kitchen, home and personal care products for our customers. We are a U.S.-based manufacturer and all our products meet strict standards for manufacturing, safety and performance.

We also believe in providing the best customer service and support in the industry. That is why we offer a 2-year warranty on this product that ensures your satisfaction - so you can enjoy it for years to come.

If you have questions about your product or in the rare instance you need to file a warranty claim, please email CustomerCare@thesecura.com. For fastest response, please include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

Your feedback and suggestions are also important to us, so please email them to us at CustomerCare@thesecura.com.

The Secura Team

SECURA®

Copyright 2017 - 2018 Secura, Inc. All rights reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

TABLE OF CONTENTS

GENERAL SAFETY INSTRUCTIONS	1
FEATURES AND PARTS	3
SAFETY INSTRUCTIONS	4
KETTLE PREPARATION	4
OPERATING INSTRUCTIONS	5
SUGGESTED TEMPERATURE RANGE CHART	7
CARE & CLEANING	8
PRODUCT SPECIFICATIONS	9
DISPOSAL	10
CONTACT	10
MANUFACTURER'S LIMITED WARRANTY	11

GENERAL SAFETY INSTRUCTIONS



To reduce the risk of electrical shock, fire or injury, and to extend the life of your product, please read and observe all information in this manual prior to and while using your product. Please save this manual for future reference.

When using this appliance, always follow the safety precautions listed below.

- Read all instructions before using the appliance.
- This appliance is for personal use only and not for any type of commercial use.
- Do not use this appliance in any way other than its intended use.
- Do not operate outdoors or in any type of wet or extreme conditions.
- For added safety, this appliance should always remain unplugged when not in use.
- Check the appliance and power cord for visible damage before every use. Do not attempt to operate or repair if damaged or if the product malfunctions in any way. Contact our customer service department at CustomerCare@thesecura.com or 888-792-2360 for additional information.
- Do not leave the product unattended while operating.
- Never allow children to operate, have access to, or leave them unsupervised near this appliance.
- Always use and store this appliance on a flat, level, stable surface, away from any ledge.
- Do not place the appliance or the power cord on or near a stove top, open flame or other heated surface.
- To allow optimal airflow and avoid overheating, always allow at least a 4-inch clearance on all sides of the appliance when in use and while cooling down.
- Carefully position the power cord so no one can become entangled in the cord and so that it is not a tripping hazard.
- If applicable, place the appliance on its base or plug the removable power cord into the appliance before plugging the power cord into an outlet. Do not plug the power cord into an outlet until the product is fully assembled and ready to use.
- Always use designated handles, knobs, or other grips as instructed because the exterior may become heated during use. To reduce the risk of burns or scalding, use caution when handling this appliance during and immediately following use.
- This appliance may release heat, steam and hot water during and after operation. Use extreme caution when handling to prevent the risk of burns, scalding or other injuries and damage to property.
- The use of third-party accessories or attachments or any not designed specifically for this model, may result in fire, electric shock, or injury and damage to property or the appliance.

- Always unplug and allow to cool before moving, disassembling, cleaning or storing.
- Never immerse the base, motor, power cord or power plug in liquid or expose to other wet environments.
- Never place the base, motor or power cord in the dishwasher.
- Only place parts in the dishwasher that are specifically identified in this manual as dishwasher-safe. Only place on top rack of dishwasher unless otherwise stated.
- Always follow the cleaning methods recommended in this manual. Never use harsh chemicals or abrasive materials to clean the appliance.
- All parts should be completely dry before assembling, using or storing.
- Do not dispose of electrical appliances as regular municipal waste. Use a designated collection facility. Contact your local waste management or regulatory agency for information regarding disposal options. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the soil and groundwater, exposing all living things to harmful toxins.



WARNING!

The kettle and base are **NOT** dishwasher safe. Do not place any of the parts in the dishwasher or submerge them in liquid.



CAUTION:

To avoid circuit overload, do not operate another high wattage appliance on the same outlet or circuit.



 
Always follow basic safety precautions when using your appliance, especially when children are present.






CAUTION: HOT SURFACES! - This appliance generates heat and ejects steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury and prevent the risk of damage to property.

FOR PERSONAL USE ONLY
SAVE THESE INSTRUCTIONS

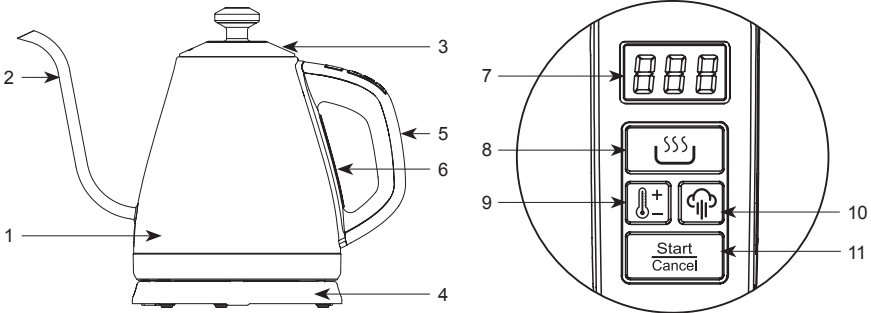


FEATURES AND PARTS



1. Stainless Steel Body
2. Stainless Steel Gooseneck Spout
3. Lid
4. Stable 360 Degree Power Base
5. Handle
6. See-thru Water Level Display

7. LED Display
8. Keep-Warm 
9. Temperature Selection 
10. Quick Boil 
11. Start/Cancel Button 

FEATURES

- 0.5 Liter Minimum Capacity / 1.0 Liter Maximum Capacity
- Temperature Selection  lets you choose one of 8 pre-set temperatures (100°F, 140°F, 160°F, 175°F, 185°F, 190°F, 200°F, 212°F)
- Quick Boil  heats water to 212°F in minutes
- Keep Warm  maintains desired water temperature for up to 30 minutes while the kettle remains on the base
- Slim, curved spout for an effortless, controlled flow - excellent for brewing drip coffee and filling tea cups with precision
- Ergonomic design makes the kettle is easy to carry and pour without straining the wrist
- Cordless kettle design lets you easily and quickly take the kettle where you need it without having to handle a cord
- Auto shutoff gives you added safety by turning off the kettle once the water is heated
- Boil-dry Protection prevents damage by shutting off the heating element if the kettle is empty
- Stainless steel construction is stain- and corrosion-resistant to last longer and provide better tasting water
- Cool Touch lid knob keeps your fingers away from the heated exterior
- Under base cord storage keeps your cord protected and your counter organized
- Smart Memory stores last temperature selection

SAFETY INSTRUCTIONS

- The kettle and base should always be placed on a stable, flat and dry surface.
- Never touch the metal exterior of the kettle or lid while in use. The handles on the kettle and lid remain cool, but the body of the kettle and lid will be very hot.
- Never attempt to use the kettle without the lid seated securely on top of the kettle.
- If the Keep Warm function has not been set, the kettle turns off automatically when the water has reached the desired temperature.
- The kettle turns off automatically when removed from the base.
- Be careful of steam coming from the lid vents or spout, especially during pouring or if adding water immediately after boiling.
- The Boil Dry Protection Sensor turns the kettle off automatically when it detects that the kettle is empty. If The Boil Dry feature is activated, please allow the kettle to cool down at least 15 minutes before refilling.

KETTLE PREPARATION

Preparing your kettle for first time use:

1. Remove the lid and fill the kettle with cold water until it reaches the MAX line on the WATER LEVEL DISPLAY.
2. Secure the lid on top of the kettle, place the kettle onto the base and plug the power cord into an outlet.
3. Press Quick Boil and then press START. The START button will change from blue to red and remain on until the water comes to a boil (212°F). Once the water boils, the kettle turns off automatically and the START button will return to blue.
4. Carefully remove the kettle from the base, discard the water and allow the kettle to cool for 1 minute.
5. Repeat steps 1-4 again to remove any production residue from the interior of the kettle.

NOTE: Do not consume the water used during the preparation process. It should be discarded immediately.

OPERATING INSTRUCTIONS

1. Place the kettle on a stable, flat surface and away from the edge.
2. Lift the kettle from the base and remove the lid.
3. Fill the kettle with cold water until it reaches the MAX line on the WATER LEVEL DISPLAY and secure the lid in place.
4. Place the kettle on the base and plug the power cord into an outlet to put the kettle into Standby Mode. The kettle will beep once, the START/CANCEL button will turn blue and the LED DISPLAY will show the current water temperature.
5. Following the directions below, use the TEMPERATURE SELECTION, KEEP WARM, QUICK BOIL and/or START/CANCEL buttons on the handle for the desired function.

NOTE: For your convenience, the kettle's SMART MEMORY feature stores the last selected temperature even when disconnected from power supply.

QUICK BOIL Function

Brings a full kettle of water (1L) to a boil in approximately 6 minutes.

With the kettle in standby mode:

1. Press QUICK BOIL followed by START to begin the boiling process. The START button will change from blue to red.
2. Once the water comes to a full boil, the kettle will beep once and the START button will change back to blue to indicate the kettle has switched to Standby Mode.

Heat

Heats the water to one of 8 pre-set temperatures.

With the kettle in standby mode:

1. Press TEMPERATURE SELECTION to display the last selected temperature. If needed, continue pressing until you reach the desired temperature.
2. Press START to begin the heating process. The START button will change from blue to red.
3. When the water reaches the selected temperature, the kettle will beep once and the START button will change back to blue to indicate the kettle has switched to Standby Mode.
4. To reheat the water when in Standby Mode, press TEMPERATURE SELECTION and then press START.
 - Press START/CANCEL once to cancel the heating process.
 - If you select a water temperature that is lower than the current water temperature, the unit will immediately beep once and enter Standby Mode.

Heat with Keep Warm Function

Heats the water to one of 8 pre-set temperatures and maintains the temperature for up to 30 minutes.

With the kettle in standby mode:

1. Press TEMPERATURE SELECTION to display last selected temperature then continue pressing until you reach the desired temperature.
2. Press KEEP WARM and then press START to begin the heating process. The START button will change from blue to red.
3. When the water reaches the selected temperature, the kettle will beep 1 time and the KEEP WARM function will activate with the button flashing blue.
4. The kettle will automatically switch to Standby Mode and the START button illuminate blue when either 30 minutes has passed or the kettle is removed from and returned to its base.
5. To restart the Keep Warm function when in Standby Mode, press KEEP WARM and then press START. The Keep Warm function will start another 30-minute cycle.
 - If needed, press START/CANCEL once at any time to cancel the KEEP WARM function.
 - For safety reasons, if 212°F (boil) is the set temperature, once the water boils the kettle will enter the KEEP WARM function and maintain the water at 200°F.
 - If you select a water temperature that is lower than the current water temperature, the unit will immediately beep once and enter KEEP WARM mode.
 - For safety reasons, the KEEP WARM function shuts off automatically when the kettle is removed from the base. To reactivate the Keep Warm once the kettle is returned to its base, press KEEP WARM and then press START.

Quick Boil with Keep Warm Function (for purifying tap water)

Brings the water to a boil and then maintains it at 200°F for up to 30 minutes. For safety reasons, the kettle will not attempt to keep the water at 212°F (boil) during the 30-minute KEEP WARM time.

With the kettle in standby mode:

1. Press QUICK BOIL.
2. Press KEEP WARM and the button will illuminate blue.
3. Press START to begin the process. The START button will change from blue to red.
4. Once the water boils, the kettle will beep once and the KEEP WARM function will activate with the button flashing blue. The KEEP WARM button will continue to flash until the water has dropped below 200°F and then will remain illuminated while in KEEP WARM mode.
5. The kettle will automatically switch to Standby Mode and the START button illuminate blue when either 30 minutes has passed or the kettle is removed from and returned to its base.
6. To restart the Keep Warm function when in Standby Mode, press KEEP WARM and then press START. The Keep Warm function will start another 30-minute cycle.
 - If needed, press START/CANCEL once at any time to cancel the process.

CANCEL

If the START/CANCEL button is red, press the button once to turn off all functions and put the kettle in standby mode. The START/CANCEL button will illuminate blue and all other buttons will turn off.

SUGGESTED TEMPERATURE RANGE CHART

	Temperature
Black Tea/Tea Bags	205-210°F
Coffee	200-205°F
Hot Cereal	195-200°F
Cocoa	190-195°F
Oolong Tea	175-190°F
White Tea	175-190°F
Green Tea	165-175°F

POUR OVER COFFEE BREWING

These instructions are a starting point for drip brewing, which is known for delivering a smooth, clean, less bitter cup of coffee. Although the recommended water temperature is 200°F, with pour over brewing, you can adjust the grind size, the resting time, and even the temperature to your preferences. To achieve that perfect brew, we recommend using one of our Secura Pour Over Coffee Dripper Sets which includes a Thermal-resistant borosilicate glass carafe, stainless steel mesh filter and a non-slip trivet.

Brewing Instructions

1. Measure 6 ounces of water per cup of coffee and begin heating to 200°F.
2. Grind two Tablespoons of coffee beans per cup of coffee.
3. With the filter in place and your carafe seated on the trivet, prepare to brew coffee by filling the carafe to the top with warm water, allowing it to sit for 2 to 3 minutes and then draining the water completely to pre-heat the filter and carafe.
4. Place coffee grounds into the filter.
5. With the water at 200°F, slowly and evenly pour only enough water until all the coffee grounds are wet, then allow the grounds to rest for 30-45 seconds.
6. Once the wet grounds have rested, start in the center of the grounds and begin slowly pouring the remaining water in a concentric circle until 1/4" from the filter's edge. Next, reverse the circle until the center is reached. Repeat until all water is used.
7. Allow all the water to pass through the coffee grounds before carefully removing the filter.
8. Enjoy a cup of your perfectly brewed drip coffee!

CARE & CLEANING

IMPORTANT SAFEGUARDS

- Do not allow water to accumulate on or around any exterior components or connectors.
- Never use harsh chemicals or abrasive materials to clean the kettle or the base.
- Never submerge your kettle or base in water.

CARING FOR THE EXTERIOR & BASE

- Wipe the outside of the kettle and base with a soft, damp cloth.
- A small amount of mild dishwashing liquid may be applied to the cloth, if needed. Followed by a thorough wiping with a clean, slightly dampened, soft cloth to remove any remaining soap residue.
- Dry by hand with a soft, dry towel.

CARING FOR THE INTERIOR

- Kettle interior may be cleaned by hand using a mild dishwashing liquid or a soft cloth or sponge. Follow with a thorough rinsing until water runs clean.
- Dry by hand with a soft, dry towel.

MINERAL BUILD-UP

Depending on the mineral content (also known as "hardness") of the water you use, it is normal for mineral build-up or scaling to occur on the stainless steel interior. Even filtered water contains some minerals, so scaling will likely happen over time.

For optimal performance, we recommend decalcifying your kettle regularly to prevent any excessive build-up, which can reduce the efficiency and lifespan of your kettle. Removing mineral deposits can be done using the following method:

1. Fill the kettle to the MAX line with a vinegar solution of equal parts white vinegar and warm water. For example, if your kettle has a MAX fill line at 1-liter (34 ounces), fill the kettle with 0.5-liters (17 ounces) of white vinegar and 0.5-liters (17 ounces) of warm water.
2. Replace the lid and place the kettle on its base.
3. Plug the power cord into an outlet and following the kettle's operating instructions for boiling water.
4. Once the water boils and the kettle shuts off, allow the kettle to sit for 30 minutes.
5. After 30 minutes, carefully empty the kettle and rinse with cool water.
6. Wipe the interior with a soft cloth to remove any remaining build-up.
7. If mineral deposits remain, you may repeat steps 1 – 5 up to two more times to remove as much of the mineral build-up as possible.
8. After the third time, repeat steps 1 – 5 using only water to ensure the interior of the kettle is clean and vinegar-free.
9. Dry thoroughly with a soft cloth.

If there is excessive mineral build-up or the above process does not remove all of the scaling, you can clean the interior with a stainless steel cookware cleanser, such as Bar Keeper's Friend® using the following steps:

1. Rinse the interior of the kettle with cool water to dampen.
2. Sprinkle a small amount of the cleanser inside the kettle.
3. Gently rub the cleanser around the interior with a wet sponge or cloth for up to one minute, adding more cleanser as needed.
4. Rinse with cool water until water runs clear.
5. Dry thoroughly with a soft cloth.

PRODUCT SPECIFICATIONS

Model number of the product	KE4012A
Power source	120V
Power frequency	60Hz
Power consumption	1000W
Weight	2.4 pounds

DISPOSAL



When your appliance has reached the end of its life, please be responsible with its disposal. Do not dispose of electrical appliances as regular municipal waste. This and other electrical appliances include valuable materials that can be recycled and also hazardous substances that can contaminate the soil and groundwater. Please follow the rules of your municipality and contact your local waste management or regulatory agency for the location of the nearest authorized recycling facility or information regarding other disposal options.

CONTACT

If you have any problems with this unit, please contact our Customer Service Department at 888-792-2360 or email us at CustomerCare@thesecura.com.

Please read operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of this product warrants to the original purchaser of this product that this product will be free from defects in material and workmanship under normal use and service for 2 years from date of purchase. Manufacturer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the product, and all costs of shipping the product for inspection and warranty service shall be borne solely by the purchaser.

For fastest processing of warranty claim, Purchaser should email CustomerCare@thesecura.com and include product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller or distributor.
2. Only the original purchaser is covered by this warranty. This warranty is not transferable.
3. Product is for personal use only. This warranty is void if the product is used in a commercial or institutional establishment.
4. This warranty does not cover normal wear and tear or damage caused by misuse, abuse, negligence, accident, acts of nature, or unauthorized modification or repair.
5. Purchaser must present acceptable proof of purchase for the product.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Secura, Inc.
CustomerCare@thesecura.com
Lake Forest, California

SECURA®

Secura Bestsellers

Duxtop Portable 1800W
Induction Cooktop



Secura 1700W Electric
2-in-1 Grill Griddle



Secura Triple Basket
Electric Deep Fryer



Secura Electric
Hot Air Fryer



Duxtop Whole-Clad Tri-Ply Premium Cookware



Secura Electric
Hot Pot Kettle



 
Secura Electric
Water Kettle



Secura Electric
Wine Opener



Secura Premium
Wine Aerator

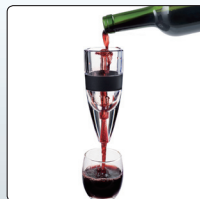

Secura, Inc.

888-792-2360

CustomerCare@thesecura.com

www.thesecura.com

Lake Forest, California

For the fastest processing of a warranty claim, the owner should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.