

SECURA®

TEMPERATURE CONTROL COOL TOUCH ELECTRIC WATER KETTLE

USER MANUAL

MODEL: SWK-1711TDB



| 1.7L | 1500W |

www.thesecura.com

WELCOME

Congratulations on your new purchase from Secura!
We believe in providing the best products to our customers, and all Secura products meet strict standards for manufacturing, performance, and safety. We believe in providing the best customer service, and that is why we offer a two year warranty that will ensure customer satisfaction. You can expect to continue enjoying your new electric water kettle for many years.

SECURA®

Copyright © 2017 – Secura Inc. - All rights are reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

SAFETY PRECAUTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handle or knobs.
- To protect against fire, electric shock and injury, do not immerse the cord, plug, base or kettle in water or other liquid.
- Never leave the appliance unattended when in use. Keep out of reach of children.
- Always unplug the base from the power outlet when the kettle is empty, while filling the kettle with water, moving the kettle or while the kettle is not in use.
- Allow the kettle to cool before cleaning.
- Do not operate if the base, cord, plug or kettle becomes damaged.
- Keep cord away from hot surfaces.
- For indoor use only.
- The electric kettle must be operated on a flat surface.
- Do not place on or near a hot gas or electric burner, in a heated oven, or on top of other home appliances.
- Be careful of steam coming from the spout or vented lid, especially during refilling or pouring.
- Never remove the lid during the boiling cycle, scalding may occur.
- Do not overfill the kettle as water may boil over creating an electrical hazard or a scalding danger.
- The kettle is only to be used with the base unit provided.
- Do not add anything other than water.
- **The kettle lid is not designed to be water tight. Steam is allowed to vent during the heating process. The Safety Button on the kettle lid controls water flow and protects from excessive spillage in the event the kettle tips. A small amount of hot water will be allowed to escape from the spout should the kettle tip.**
- The removable lid has an internal valve designed to work with the Safety Button. The noise from that valve when the lid is handled is normal and not a defect.

WARNING! The Electric Water Kettle and its base are NOT dishwasher safe. Do not place any of the parts in the dishwasher or submerge them in liquid.

SAVE THESE INSTRUCTIONS
Household use only, not for commercial use.

1.7 Liter Temperature Control Cool Touch Electric Water Kettle

STORAGE

- Clean and dry all parts before storing.
- Store in box or a dry, clean area.
- Always use the cord storage on the bottom of the base. Never wrap the power cord around the kettle.

ADDITIONAL SAFEGUARDS

- Do not operate the kettle if the cord shows any damage, the kettle works intermittently or stops working completely.

Extension cords:

To avoid the chance of tripping over or becoming entangled in the cord, a short power-supply cord is provided. Extension cords may be used with caution and care. When using an extension cord take note of following:


1. The electrical rating for the extension cord should be at least as great as the electrical rating of the kettle.
2. Make sure the extension cord is a grounding-type 3-wire cord.
3. To avoid tripping, never drape the longer cord over a countertop.



CAUTION: Only connect to a properly grounded outlet to prevent the risk of electric shock.

GROUNDING INSTRUCTIONS

This kettle uses a 3-prong grounding plug (Figure A), which fits into a 3-wire receptacle. If using a 2-wire receptacle, use an adaptor (Figure B), the small tab that extends from the bottom of the adaptor is the grounding tab and must be connected to a permanent ground, such as a properly grounded receptacle (Figure C), using a metal screw.

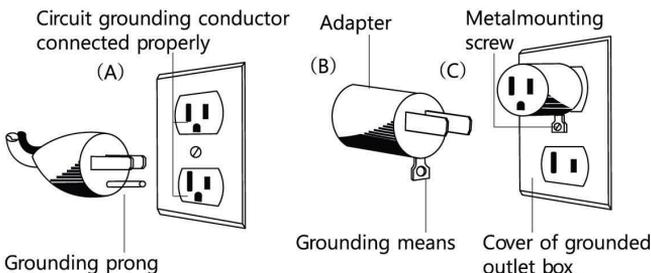

KETTLE PREPARATION

Preparing the kettle for first time use.


- A. Remove the lid and fill the kettle to the maximum fill line with cold water.
- B. Place the lid back on the kettle and place the kettle onto the base unit, connect the power plug to the wall outlet.
- C. Press the Boil/Cancel Button one time to start the quick boil function.
- D. After the water comes to a boil the kettle turns off automatically. Carefully remove the kettle from the base, empty the water and allow the kettle to cool for 1 minute. Repeat this process to ensure all manufacturing residue has been removed from the inside of the kettle.

TECHNICAL INFORMATION

Rated Voltage	120V 60HZ
Rated current	8.3A
Rated power input	1500W
Capacity: Max	1.7L

1.7 Liter Temperature Control Cool Touch Electric Water Kettle

PARTS LIST

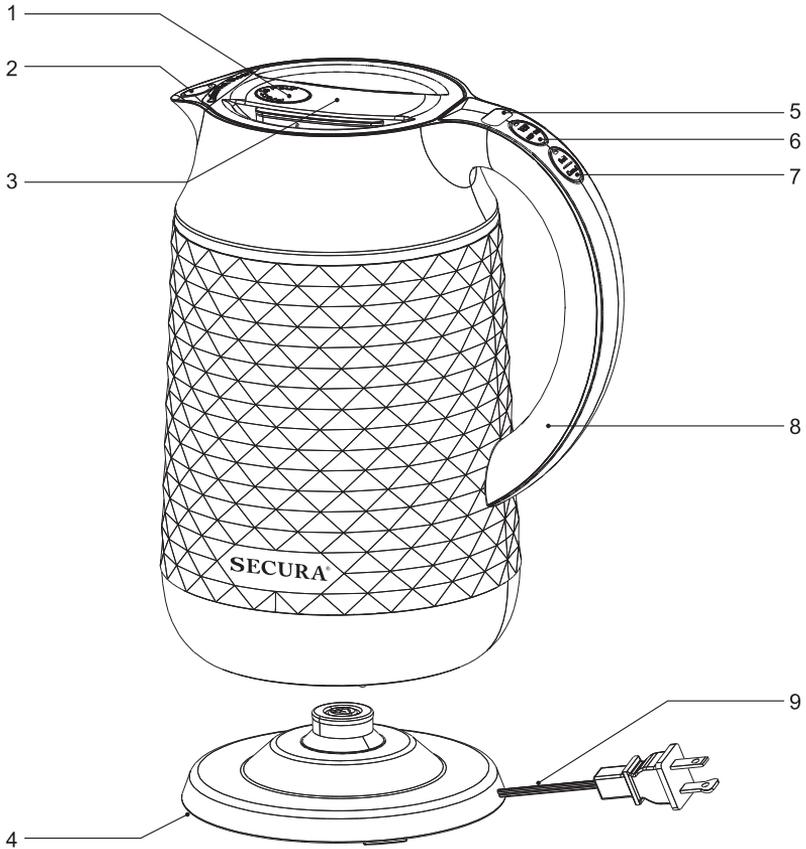

- 1. Safety Pour Control Button
- 2. Spout
- 3. Lid
- 4. Cord Storage
- 5. LCD Display

- 6. Temp/keep warm button
- 7. Boil/Cancel button
- 8. Handle
- 9. Plug and Power Cord

OPERATING INSTRUCTIONS

Place the base on a flat surface

- A. Remove the kettle from the base, remove the lid from the kettle by pressing the release tabs on the lid and fill the kettle to the maximum fill line (1.7L) with cold water.
- B. Place the lid back on the kettle, making sure it “locks” into place, place the kettle onto the base and connect the power plug to the wall outlet.
- C. The kettle will run a self-check, beep once and display “888”. Then the current temperature of the water in the kettle will be displayed and the kettle will be in a “stand-by” mode.
- D. There are 2 control buttons on the kettle handle (Temp/Keep Warm and Boil/Cancel) which provide 3 separate functions.

Boil/Cancel

- The Boil/Cancel function brings a full kettle of water (1.7L) to a rolling boil in approximately 8 minutes. For the “quick boil” function, press the “Boil/Cancel” button one time, the button will illuminate indicating the cycle has begun. Once the water has come to a full boil 5 beeps will sound and the kettle will switch to stand-by mode.

Temp/Keep Warm-Best with purified or distilled water

- The Temp/Keep Warm button allows you to heat water to 8 different temperatures and then keeps the water heated to the selected temperature for up to 4 hours. The display will initially display the current temperature of the water and the button will not be lit, press the button to cycle through the available programmed temperatures, the button will illuminate and once a temperature is selected the display flashes 5 times to signify a selection is made, then the display reverts back to the current water temperature. Once the selected temperature is reached 5 beeps will sound and keep warm activates for up to 4 hours.

Boil then keep warm at selected temperature-Best with tap water for purification

- This function brings the water to a full boil and then allows the water temperature to lower and hold at a predetermined temperature for up to 4 hours. From Stand-by mode, use the Temp/Keep Warm control to select the water temperature you want to “Keep Warm” at by cycling through the temp/keep warm function, then press the boil/cancel button. The water will come to a full boil, the kettle will beep 5 times, the keep warm light blinks and the boil/cancel light turns off. The water cools and once it reaches the pre-selected temperature the blinking keep warm light turns to a solid light and keep warm will activate for 4 hours.....after 4 hours all lights are off and the cycle is over.

1.7 Liter Temperature Control Cool Touch Electric Water Kettle

Water Temperature Table

Warm drinking water	100 F
Hot drinking water	140 F
Delicate tea	160 F
Green tea	175 F
White tea	185 F
Oolong tea	190 F
Hot water for instant coffee	200 F
Black	212 F

E. After each use, remove the plug from the wall outlet.

F. **WARNING:** The kettle's interior is very hot during use, DO NOT TOUCH!

G. **WARNING:** Never immerse the kettle in water!

H. **WARNING:** Never immerse the base in water!

HOW TO CLEAN

- Clean the inside of the kettle by hand with mild dishwasher detergent and rinse thoroughly until water runs clean.
- Clean the outside of the kettle and base with a damp cloth.
- Dry by hand with a dry towel.

WARNING: Never submerge your kettle or the base in water.

DECALCIFYING

If mineral build up occurs inside your kettle, it is recommended to descale the kettle to ensure optimum performance.

REMOVING MINERAL BUILD UP

1. Fill the kettle with warm water and vinegar ($\frac{1}{2}$ vinegar and $\frac{1}{2}$ water) up to the max line.
2. Close the lid and place the kettle on its base.
3. Insert the power cord and run the "quick boil" cycle.
4. Run through a complete boiling cycle, repeating 3 times.
5. After decalcifying, run through a complete boiling cycle with plain water.

8 Programmed Temperatures

8 programmed temperatures can be selected from the TEMP/KEEP WARM button: 100°F, 140°F, 160°F, 175°F, 185°F, 190°F, 200°F & 212°F.

DISPOSAL



When the appliance has reached the end of its life, please be responsible with its disposal. This and other electrical appliances contain valuable material and can be dangerous to the environment if not disposed of properly. We ask that you follow the rules and regulations of your town as far as disposing of electric appliances. Please endeavor to take the appliance to an authorized recycling facility near you.



CONTACT

If you have any problems with this unit, please contact our customer service department at (888) 792-2360 or CustomerCare@thesecura.com

Please read operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of the product warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 2 years after date of purchase. Manufacturer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void if the product is used in a commercial or institutional establishment.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Secura Inc.
CustomerCare@thesecura.com
Brookfield, Wisconsin. USA

SECURA®

Secura Inc.

Tel: 888-792-2360

CustomerCare@thesecura.com

www.thesecura.com

Brookfield, Wisconsin. USA

For warranty claims, please visit our website **www.thesecura.com**
to submit a warranty claim and provide proof of purchase