


SECURA®

SECURA TURBO BLAST 2-IN-1 GARMENT STEAMER AND STEAM IRON

MODEL: SWS-178A

USER MANUAL

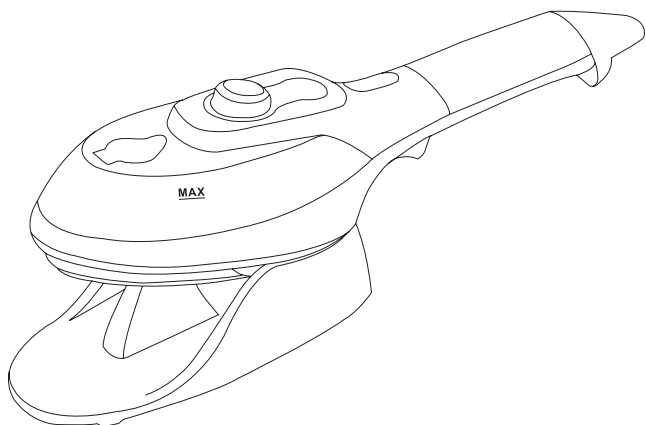

www.thesecura.com

SAVE THESE INSTRUCTIONS
Household use only, not for commercial use.

WELCOME

Congratulations on your new purchase from Secura!
We believe in providing the best products to our customers, and all Secura products meet strict standards for manufacturing, performance, and safety. We believe in providing the best customer service, and that is why we offer a three year warranty that will ensure customer satisfaction. You can expect to continue enjoying your new appliance for many years.

SECURA[®]

Copyright © 2016 – Secura Inc. - All rights are reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review. Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

SAFETY INSTRUCTIONS

The Steam Brush and Steam Iron combination is an electrical appliance which requires certain precautions be taken:



RISK OF PERSONAL INJURY !

- When the appliance is hot, grasp it only by the handle.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge, unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Care should be taken when using the appliance due to the emission of steam.
 - Unplug the appliance and allow it to cool down before re-filling the water reservoir or cleaning the appliance.
 - If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person, in order to avoid a hazard.
 - Never hold your hand over the steam spray or on hot metal parts.
 - You should not open the filler opening of the water reservoir while the iron is plugged in and in use. If it runs out of water, unplug the appliance and let it cool down before adding more water to the reservoir.
 - NEVER iron clothing while they are being worn!
 - NEVER direct jets of steam at other people or animals!
 - Under NO circumstance should you use the appliance if it shows visible signs of damage, has fallen or leaks water. Arrange for it to be repaired by a qualified specialist.



RISK OF FIRE !

- Do NOT leave the appliance unsupervised when it is connected to an electrical plug.
- Always allow the appliance to cool down before storing it.
- When not in use, place the appliance on its stand on a level and heat resistant surface.
- There are 3 settings for the iron, low, med & max, as signified by “.” “..” “...” on the temperature setting gauge. If care instructions are not given for the garment you are ironing or are unknown, start with the lowest temperature setting.



RISK OF ELECTRICAL SHOCK !

- Make sure your local power rating matches the requirements of this appliance.
- To avoid possible danger, arrange for a defective appliance to be checked and possibly repaired by a qualified technician, or contact our Customer Service Department.
- Arrange for defective electrical plugs and/or cords to be replaced at once by qualified technicians or our Customer Service Department.
- To disconnect the appliance from the wall socket, only pull on the plug, not on the cord.
- Never bend (kink) or crush the power cord. Arrange it in such a way that it can not come into contact with hot surfaces and it does not pose a tripping hazard.
- Unplug the appliance after each use and before cleaning it or refilling the reservoir.

- Always unroll the power cord before use to ensure no kinks or knots are in it and do not use this device with an extension cord.
- Never touch the power cord or the power plug with wet hands.
- Under no circumstances should the appliance be immersed in fluids or should fluids be allowed to enter the housing. Do not expose the appliance to excessive humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power socket immediately and arrange for it to be repaired by a qualified technician.
- NEVER use the appliance adjacent to water contained in a bath, shower, wash basin or other vessels. The proximity of moisture presents a danger, even when the appliance is switched off.
- Do not open the appliance housing to attempt repairs. Only authorized technicians should repair a defective appliance.

ATTENTION !

- If the care instructions for the garment you are attempting to iron says “Do not iron” you should not use the Steam Iron on it, as damage could occur to that garment.
- The water tank can be filled with tap water or a mixture of tap water and distilled water.
- Do not clean the appliance with solvents, alcohol or abrasive cleaning agents. These could cause damage to it.

INTENDED USE


This dual purpose appliance can be used for traditional ironing of your garments or, using the powerful steam burst feature, you can “relax” the wrinkles from your garments while they are on hangers.

- The combination Steam Brush and Steam Iron is portable and perfect for traveling. It allows you to freshen up your wardrobe at a moment's notice.

- The lint brush attachment can be used for removing lint and fluff on clothes, sofas, curtains, blankets or other textiles.

- The fabric bristle brush attachment can be used for brushing away dust on clothes, sofas, curtains, blankets or other home textiles.

PARTS IDENTIFICATION

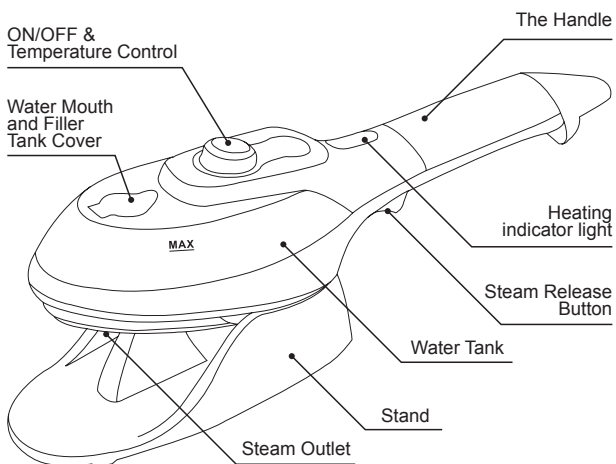

ASSEMBLING THE DEVICE

Before the First Usage

- Remove the steam brush from the packaging.
- Remove all adhesive tags and protective foils from the steam iron.

ATTENTION !

Plastic bags can be dangerous. To avoid fatalities through suffocation, keep plastic bags out of the reach of children.

- Insert the power plug into a correctly installed and grounded electrical socket.
- Hold the steam brush horizontally.
- Place the temperature regulator at the "... " setting. Do not activate the steam setting by pressing on the "steam" button.
- Allow the Steam Brush and Steam Iron to run at its highest setting for several minutes. By doing this you will clear production residues from the sole of the appliance.
- Then iron an unneeded piece of material, this will remove any impurities that may possibly be on the sole of the iron.

Note:

The first time the appliance heats up, a small volume of smoke and odor may be generated. This is caused by production residues and is completely normal and not dangerous. Provide for sufficient ventilation by opening a window.

OPERATION

Information

- If the care instructions on your garment say "Do not press or iron", do not attempt to use this appliance on it as permanent damage might occur to the garment.
- Do NOT use the appliance on leather, velvet, impregnated furniture or steam sensitive materials. If you do, the material/ furniture could be damaged.

Filling with water

ATTENTION !

- The use of distilled water in this appliance is HIGHLY recommended.
- NEVER fill the water tank with chemical substances, cleaning agents or fluids other than water.
- Do not use chemically treated water. This would irreparably damage the appliance.
- If you do use tap water in this appliance and the water in your area is "hard" the jets for the steam blast function could calcify (become blocked) prematurely. Use the table (below) to determine a proper mixture of your tap water and distilled water.

Water Hardness	Ratios-distilled water to tap water
Very soft/soft	0
medium	1:1
hard	2:1
Very hard	3:1

ATTENTION !

To avoid the risk of electric shock, always remove the plug from the electrical socket prior to refilling the water tank.

- Pull out the water tank filler cover.
- Use the water cup (supplied) to fill the reservoir to the “MAX” level.
- Firmly replace the water tank filler cover.

ATTACHING/DETACHING THE ACCESSORIES

ATTENTION !

NEVER attempt to attach or detach the accessories when the appliance is heated up. You run the risk of Burns!

Steam iron operation

- Without any accessories attached you can use this appliance as a traditional steam iron.
- Choose a reasonable temperature setting according to different fabrics, such as “...” for COTTON, “..” matches with WOOL, “.” matches with NYLON and SILK.
- The low setting “.” may not heat the water enough to generate steam and should be used when you are going to dry iron.

Fabric bristle brush operation

- Assemble the Fabric bristle brush with the soleplate; you can brush dust from; clothes, sofas, curtains, blankets or other home textiles. Assembly instructions: Line up the notch on the head of the steamer to the notch on the head of the Fabric bristle brush, locking it to the head of the soleplate, then press the back of the fabric bristle brush until it locks against the soleplate, you will hear a “click”. When you hear the “click” the attachment is locked in place.
- Removal instructions: Hold the handle in the middle (close to the “OPEN” switch) with one hand, using your thumb, slide the “OPEN” switch to the right until the attachment unlocks from the handle. Once the attachment unlocks from the handle, lift the attachment straight up and slightly forward to separate the attachment fully from the handle. To avoid damaging the fabric bristle brush, it's necessary to adjust the temperature control to position “..”.

Lint brush operation

- Assemble the Lint brush with the soleplate, you can brush lint from clothes, sofas, curtains, blankets or other home textiles. Assembly instructions: Line up the notch on the head of the steamer to the notch on the head of the lint brush attachment, locking it to the head of the soleplate, then press the back of the lint brush attachment against the soleplate until you hear a “click”. When you hear the “click” the attachment is locked in place.
- Removal instructions: Hold the handle in the middle (close to the “OPEN” switch) with one hand, using your thumb, slide the “OPEN” switch to the right until the attachment unlocks from the handle. Once the attachment unlocks from the handle, lift the attachment straight up and slightly forward to separate the attachment fully from the handle. To avoid damaging the lint brush attachment, it’s necessary to adjust the temperature control to position “..”.

ATTENTION !

Because the temperature on the soleplate is very hot, and the inner side of the lint brush attachment is close to the soleplate, use care in the amount of time you have the attachment in use, as an extended period of use could cause damage to the attachment.

- The lint brush works best with strong steam, use the “Steam Burst” button for best results.

INSTRUCTION FOR USE

- Attach the appropriate accessory for the garment you wish to iron/steam.

- Fill the appliance with water.
- Plug in the appliance, the heating indicator light will illuminate when you have turned the temperature control knob to a level that starts the heating process.

- Rotate the temperature gauge to the desired setting. The temperature will be highest on the "MAX" setting and lower between the "OFF" and the "." setting.

NOTE: Temperature settings of "." or lower will not produce steam.

- Wait for approximately one minute while the appliance heats up. Press the steam release button for a burst of steam. As long as your temperature setting is on high, "pumping" the button on the handle can produce a more continuous flow of steam.

- Before applying steam to a garment, first test the appliance on an old piece of the same material to make sure steaming is appropriate for this type of fabric.

- Move the Steam brush and iron combination over the whole garment while pumping the steam-release button to release steam evenly. The iron may be moved both horizontally and vertically. For best results just touch the garment lightly with the iron.


- If the appliance runs out of water before you have finished steaming or ironing, allow it to cool completely before refilling it. Never use this appliance without filling it with water!

- While using the appliance, you will see that the power/heating light indicator switches itself on and off. This is normal and occurs when the appliance is adjusting to the optimum temperature.

- If you find the appliance begins to drip water from the steam orifices while you are pumping the trigger, the heat is probably not turned up high enough to turn the volume of water you are

pumping into steam. Turn the temperature control knob up.

- Unplug the Steam brush and iron combination when you are finished using it.

 **WARNING:** Always unplug the appliance after use making sure you pull on the plug, not the cord. Check to make sure the power indicator light is not illuminated.

For best ironing results:

- Some garments should be ironed inside out.
- Trousers can be ironed more easily when held from the bottom.
- When ironing, touch the fabric lightly with the iron and move it in different directions to get rid of wrinkles. It is important for the iron to touch the garment.
 - The iron will not remove stains from a garment.
 - The Steam brush and iron combination can be used with almost any kind of fabric, including silk, cotton, polyester and wool. Please read the garment's care label to check that it can be steam ironed. Certain materials such as leather, suede and velvet cannot be steam ironed.
- To ensure the garment can be steam ironed, test the iron on a small part of the interior of the garment. If no damage occurs, the entire garment can be ironed.

CLEANING AND MAINTENANCE

- When you have finished using the Steam brush and iron combination, make sure it is unplugged from the power socket before you clean it.
- Allow the water in the appliance to cool for 15 minutes. Then carefully remove the water- reservoir cap.
- Turn the appliance upside down to empty out all of the water.
- Clean the appliance and accessories only when they have completely cooled. The cleaning brush is ideal for removing any fluff from the accessories.
- Store the appliance in a dry, safe place.
- Use only clean water. Straight tap water or a combination of tap water and distilled water may be used in this appliance.
- Never put detergent, chemicals, salt, perfume, dye or any other liquid (except water) into the water reservoir. Many of these substances are highly flammable and may cause bodily harm, while certain additives can corrode and clog the appliance's components. Never add essences to perfume the water.
- The only time anything but water should be used in this appliance is when you are decalcifying it (see below).

Removing mineral deposits:

A common problem with steam irons is the accumulation of mineral deposits in the tubes, and steam holes/outlets when normal tap water is used to fill the iron. To reduce or lessen the buildup of these mineral deposits, use distilled water, or a combination of tap water and distilled water. The following steps, if taken at least once a month, can reduce the level of mineral buildup if distilled water cannot be used:

- Ensure the appliance is unplugged from the power and is cool.
- Make a solution of 50% vinegar and 50% water. 60g is enough.

- Remove the water-reservoir cap and gradually pour in the solution.
 - Plug the appliance in and set the temperature control knob to "...".
 - Allow it to steam for 20-30 minutes, adding more solution if the water reservoir becomes empty.
 - If more of the solution needs to be added to the water tank always unplug the appliance from the power supply and allow it to cool down before opening the water tank filler cover.
 - At the end of this time pour any solution remaining in the water reservoir into the sink or another container.
 - Fill the water reservoir with water and then empty it again.
- Repeat until the vinegar smell has gone.

OTHER USEFUL INFORMATION

Do not immerse the power base in water or any other liquid.

Disposal

When the appliance has reached the end of its life, please be responsible with its disposal. This and other electrical appliances contain valuable material and can be dangerous to the environment if not disposed of properly. We ask that you follow the rules and regulations of your town as far as disposing of electric appliances. Please endeavor to take the appliance to an authorized recycling facility near you.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of the product warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 3 years after date of purchase. Manufacturer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void if the product is used in a commercial or institutional establishment.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Secura Inc.
CustomerCare@thesecura.com
Brookfield, Wisconsin. USA

SECURA®

Secura Inc.

Tel: 888-792-2360

CustomerCare@thesecura.com

www.thesecura.com

Brookfield, Wisconsin. USA

For warranty claims, please visit our website **www.thesecura.com**
to submit a warranty claim and provide proof of purchase