

SECURA®



Automatic Soap Dispenser

User Manual

Model: V-473



Welcome to the Secura Family!

Congratulations on being the proud owner of your new Secura product. We believe in manufacturing only the highest quality kitchen, home and personal care products for our customers. We are a U.S.-based manufacturer and all our products meet strict standards for manufacturing, safety and performance.

We also believe in providing the best customer service and support in the industry. That is why we offer a 2-year warranty on this product that ensures your satisfaction - so you can enjoy it for years to come.

If you have questions or need assistance, please email CustomerCare@thesecura.com. For fastest response, please include product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

Your feedback and suggestions are also important to us, so please email them to us at CustomerCare@thesecura.com.

The Secura Team

SECURA®

Copyright 2018 Secura, Inc. All rights reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the express permission of the copyright holder is against the law.

TABLE OF CONTENTS

PARTS INFORMATION	1
SPECIFICATIONS	2
HOW TO USE	3
TROUBLESHOOTING GUIDE	6
CARE AND MAINTENANCE	7
DISPOSAL	8
CONTACT	8
MANUFACTURER'S LIMITED WARRANTY	9

Automatic Soap Dispenser




To reduce the risk of fire, injury or electrical shock along with extending the life of your electrical appliances, please read and follow all of the information in this manual before using and save it for future reference.



Always follow basic safety precautions when using any electrical products, especially when children are present.


FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

PARTS INFORMATION

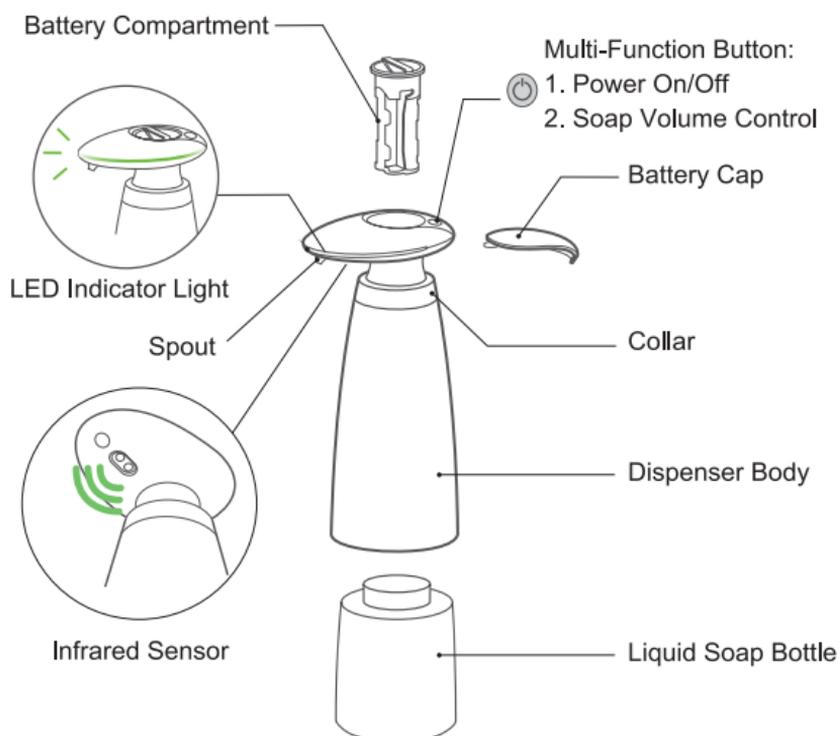

Automatic Soap Dispenser

SPECIFICATIONS

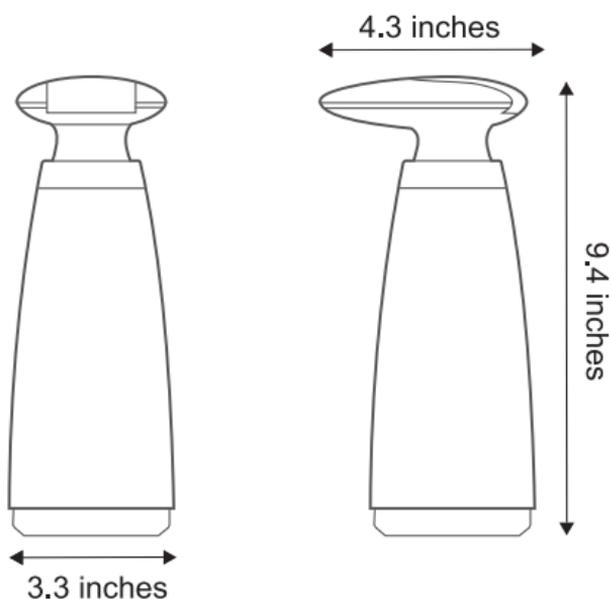


Overall dimension	3.3" x 4.3" x 9.4"
Unit materials	ABS
Vol	340 ml
Sensor range	< 3.9 inches
Liquid amount adjust	1.5 ml / 3 ml / 4.5 ml
Battery type	4 "AAA" Alkaline batteries

HOW TO USE

1. Install Batteries


- Press and slide the battery cap forward to remove it. Turn the handle of the battery compartment counterclockwise to align the arrow to the unlock position. Lift to remove the battery compartment.
- Insert 4 new "AAA" Alkaline batteries in the correct +/- positions. Insert the battery compartment and turn the handle clockwise to align the arrow to the locked position.
- Realign the battery cap, slide it back into place and press to secure it.

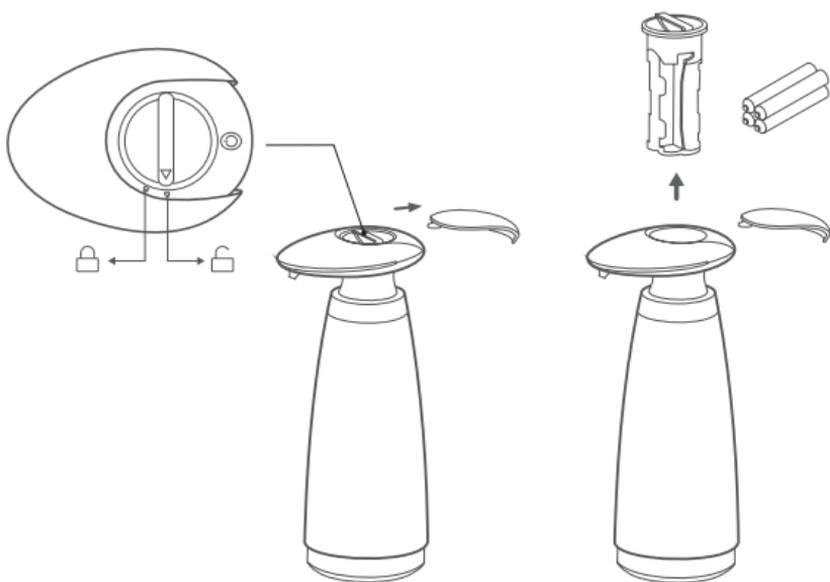

Automatic Soap Dispenser

2. Fill with Liquid Soap

- Hold the dispenser body, twist the liquid soap bottle counterclockwise to remove it. Fill with liquid soap being careful not to overfill it.
- Twist the bottle clockwise to secure it back into the dispenser body.

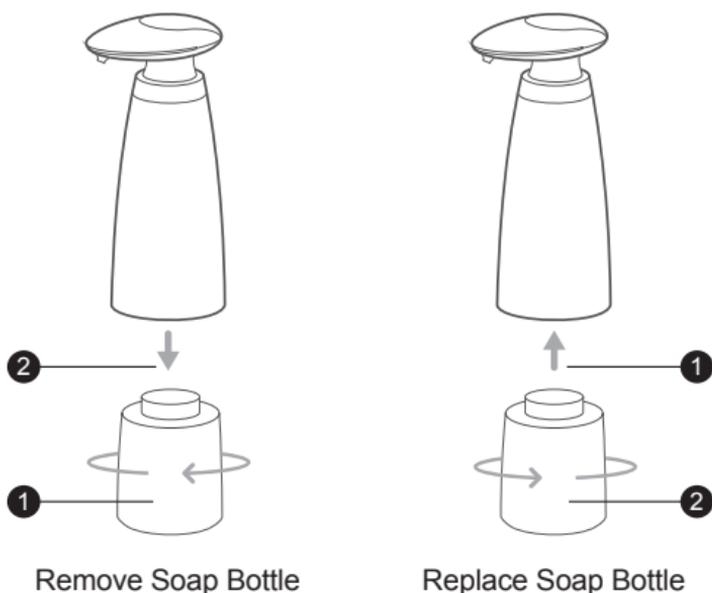

3. Power On/Off and Dispense

- Press and hold the multi-function button to turn the dispenser on. Release your finger when the LED indicator light illuminates green.
- Place your hand underneath the infrared sensor and the pump will begin to dispense soap. Hand must be within 3.9 inches of the sensor.
- Press and hold the button again to turn the unit off. Release your finger when the LED indicator light illuminates red.



Adjustable Volume Setting

- There are three soap volume settings to choose from. Press and quickly release the multi-function button once, the LED light will flash once, and the volume of soap dispensed will be 1.5 ml. Press the button a second time, the LED light will flash twice, and the volume of soap dispensed will be 3.0 ml. Press the button a third time, the LED light will flash three times, and the volume of soap dispensed will be 4.5 ml.



Press the Multi-Function Button	LED Blinks
Low Volume Setting (1.5 ml)	One time
Medium Volume Setting (3.0 ml)	Two times
High Volume Setting (4.5 ml)	Three times

Note

- Low Battery: LED will illuminate red every 3 seconds to indicate that the batteries need to be replaced.
- LED light will illuminate green while dispensing.

TROUBLESHOOTING GUIDE

Dispenser does not power on

1. Make sure the batteries are placed in the battery compartment correctly and that they are fresh.
2. Check if the multi-function button has been pressed.

Motor works but no soap is dispensed

1. If this is the first use of the dispenser, place your hand underneath the infrared sensor (within 3.9 inches) several times until the soap begins to dispense from the spout.
2. Liquid soap can become congealed in the spout or dispensing tube due to lack of use of the dispenser, or from cold/dry weather. If that has occurred, pour out any soap remaining in the liquid soap bottle, fill with warm soapy water and then operate the dispenser several times until the water begins to dispense from the spout. Pour out any remaining soapy water and refill the liquid soap bottle with liquid soap.
3. Confirm that you are using liquid soap that is:
 - Non-foaming
 - Non-granular
 - Low in alcohol (Do not use with hand sanitizer due to high alcohol content.)

CARE AND MAINTENANCE

1. Place the dispenser on a flat, level surface.
2. This product is for indoor use. Do not use in direct sunlight as it will destroy the infrared sensor.
3. Always keep the dispenser straight and upright.
4. Never immerse the battery compartment into the water or other liquid.
5. If you will not use the dispenser for a long time, please empty the liquid bottle of soap, clean the the dispenser and remove the batteries. Store it in a dry place.
6. Clean the dispenser's surface with a damp towel and the battery compartment with a dry towel. Clean the dispenser tube regularly.
7. Use liquid soap with a low concentration of alcohol. Not for use with hand sanitizer due to a high alcohol content.
8. Use non-granular and non foaming liquid soap.
9. Do not use rechargeable batteries. Never insert the new and old batteries into the battery compartment at the same time.
10. Install the battery cap back after replacing batteries.



Automatic Soap Dispenser

DISPOSAL



When this appliance has reached the end of its life, please dispose of the unit properly.

This and other electrical appliances contain valuable materials that can be recycled.

Electronic waste may be harmful to our environment if not disposed of properly.

We ask that you follow your governing agency's rules and regulations when disposing of electronic appliances. Please find an authorized recycling facility near you.

CONTACT

If you have any any questions or need assistance, please contact our customer service department at 888-792-2360 or e-mail us at CustomerCare@thesecura.com Please read the operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of this product warrants to the original purchaser of this product that this product will be free from defects in material and workmanship under normal use and service for 2 years from date of purchase. Manufacturer will, at its option, repair or replace with a new or refurbished product. The Manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the product, and all costs of shipping the product for inspection and warranty service shall be borne solely by the purchaser.

For the fastest processing of a warranty claim, the Purchaser should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller or distributor.
2. Only the original purchaser is covered by this warranty. This warranty is not transferable.
3. Product is for personal use only. This warranty is void if the product is used in a commercial or institutional establishment.
4. This warranty does not cover normal wear and tear or damage caused by misuse, abuse, negligence, accident, acts of nature, or unauthorized modification or repair.
5. Purchaser must present acceptable proof of purchase for the product.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Secura, Inc.
CustomerCare@thesecura.com
Lake Forest, California



Nozzle angle 20



ECO Materials



IPX4

SECURA[®]

Secura, Inc.

888-792-2360

CustomerCare@thesecura.com

www.thesecura.com

Lake Forest, California

For the fastest processing of a warranty claim, the owner should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.