

**SECURA**

*Electric Wine Opener*

**MODEL: SWO-3N**

**USER INSTRUCTIONS**



[www.thesecura.com](http://www.thesecura.com)

## *Welcome*

Congratulations on purchasing our SECURA Electric Wine Opener. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

# SECURA

**Copyright © 2015 – Secura Inc. - All rights are reserved.**

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

## *Important Safeguards*

When using electrical appliances, basic safety precautions should always be followed including the following:

### **READ ALL INSTRUCTIONS BEFORE USE**

1. Do not operate electric Wine Opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Contact Customer Service Center for examination, repair or electrical or mechanical adjustment.
2. To protect against risk of electrical shock, do not put the electric Wine Opener in water or other liquid. This may cause personal injury and/or damage to the product.
3. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
4. Do not use the electric Wine Opener for other than intent use.
5. This product is intended for normal domestic household use only.
6. When using or recharging the electric Wine Opener, keep your workspace clean and free from potential hazards.
7. For indoor use only. Do not expose the electric Wine Opener or charging unit to rain or other extreme conditions.
8. Never force the electric Wine Opener onto a bottle or attempt to speed up the mechanism. The electric Wine Opener will work best when it is operated at its natural speed.
9. Do not touch or adjust the electric Wine Opener's mechanism or the corkscrew spiral. Only hold the electric Wine Opener by its stainless steel housing.
10. Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove.
11. Only recharge the electric Wine Opener using the recharging unit and power cord supplied.
12. Remove the plug from the socket by holding and pulling the connector. Never pull on the cord.
13. Do not attempt to open bottles if the switch is not working correctly.
14. Do not attempt to open the Electric Wine Opener or the recharging unit. It has no serviceable parts.



## **CAUTION**

1. Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and /or damage to the product or property.
2. Do NOT use the Wine Opener when the battery is low.

## **Note: This Unit for Household Use Only.**

Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference.

## *Parts Description*



1. Up/Down Switch
2. LED light
3. Charging Stand
4. Electric Wine Opener
5. Foil Cutter

# *Electric Wine Opener*

## *Operating Instructions*

We recommend that you charge your electric Wine Opener for at least 8 hours before using it for the first time.

Please follow the instructions below for recharging your Electric Wine Opener:

### **Recharging your Electric Wine Opener**

Plug one end of the adapter cord into the base of the charging stand and the other end into a main socket. Place the Electric Wine Opener into recharging stand ensuring that it is firmly in position and that it is fully engaged with the recharging connection. You will notice that the LED light illuminates. It will take approximately 6-8 hours to recharge your electric Wine Opener. When your Electric Wine Opener is fully recharged it can be used to open approximately 30 bottles.

### **Operate Your Electric Wine Opener**

The Electric Wine Opener is operated by one single switch. The switch has two functions. Press the lower part of the switch to remove a cork from a bottle. After you have removed the cork from the bottle, press the upper part of the switch to release a cork from the mechanism.

Before remove the cork you must remove any foil from the bottle using the cutter provided. (see Fig.1)

1 Place the Electric Wine Opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Electric Wine Opener at an angle to the bottle it will not remove the cork properly. (Fig 2)

2 Hold the Electric Wine Opener firmly and depress the lower part of the switch. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the Electric Wine Opener mechanism has stopped the cork has been fully removed from the bottle. (Fig 2)



Figure 1



Figure 2

# SECURA

**WARNING:** Never force the electric Wine Opener onto a bottle or attempt to speed up the mechanism. The electric Wine Opener will work best when it is operated at its natural speed.

3. Lift the Electric Wine Opener away from the bottle. To remove the cork from the mechanism, simply depress the upper part of the switch. The spiral will turn in a counterclockwise direction and release the cork. (Fig 3)
4. Always return the Electric Wine Opener to the recharging stand when finished with it. This will protect the mechanism while it is not in use.

**Note:** It has been noted that the Electric Wine Opener may experience problems with a small percentage of plastic/synthetic corks and undersized corks, if in this case the cork should be removed manually.



Figure 3



## *Electric Wine Opener*

### *Cleaning Your Electric Wine Opener*

Electric Wine Opener should be wiped clean with a damp cloth or sponge and then wipe dry. NEVER immerse Electric Wine Opener in water. DO NOT place Electric Wine Opener in dishwasher.

**CAUTION:** Corkscrew spiral is sharp. Handle carefully.

## SECURA

### *Manufacturer's Limited Warranty*

The Manufacturer of the product warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 1 year after date of purchase. Manufacturer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void when the product is used in a commercial or institutional use.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Manufactured by  
Secura Inc.  
CustomerCare@thesecura.com  
Brookfield, Wisconsin. USA



# SECURA

Secura Inc.

Tel: 888-792-2360

CustomerCare@thesecura.com

***www.thesecura.com***

Brookfield, Wisconsin, USA

For warranty claims, please visit our website **www.thesecura.com**  
to submit a warranty claim and provide proof of purchase