



Table top Warm & Cool Mist Ultrasonic Facial Steamer



Model#S-189



Copyright © 2010 – Secura Inc. - All rights are reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

Introduction

This is the first mini household facial steamer to integrate both cool and hot steam through one source. The steamer features separate tanks for hot and cold water, allowing you to save space and benefit from a facial steamer that you would once only find in a high-end salon or spa.

Hot steam allows you to remove dirt, oil and grime from your skin and can be used as an alternative to exfoliating scrubs and chemical peels. Hot steam allows you to open and unclog your pores to prevent blackheads, breakouts and other imperfections.

Cool mist provides a soothing effect to sensitive skin whether from acne, thinness or sunburn. The cool spray causes the pores to shrink, allowing you to enjoy bright and delicate skin. Cool mist allows you to naturally moisturize as well.



Effectiveness of Steam

Hot Steam Provides Deep Cleaning of Skin

The permeation of the steam can cause the epidermis cells to soften and expand. This aids in the removal of keratinized skin cells and allows you to maintain a bright and delicate skin. The elasticity and gloss of your skin is determined by the content of collagen and hydrophilic factors. Hot steam can promote the regeneration of collagen and activate the hydrophilic factors to create skin that is more tender, smooth and delicate in appearance.

Replenish Moisture for Anti-Allergy and Desensitization

The cool mist will help the body improve its cold resistance capability as well as decrease allergies and prevent catching a cold. It will not cause the skin to sag, but will encourage it to tighten and shrink the pores, providing you with a bright and healthy skin. Long-term use of cool mist also aids in fading spots, reducing inflammation and redness and inhibits the formation of melanocytes.

Improving Humidity

Besides skin care, the steamer can also be used for interior humidifying in a powerful and efficient way. The anion cool mist promotes fresh air and health.

Intensify the Skin Elasticity with Hot/Cool Mist Alternation



Operating Principles

The cool mist is created by the steam generator and ultrasonic atomizer. The electric heating element, which is placed in the hot water tank, will produce heat energy when the current passes through, the temperature of the water will increase gradually until boiling and generate steam. It then spouts out the steam pipe to form the hot mist. The mist will be atomized into ultra-fine particles of 1-5 μm through a specially designed ultrasonic vibrator and spread into the air through the pneumatic device to make the air moisturized and associated with abundant oxygen anion, just as if you were in a natural forest. The benefit to this feature is that the particles are atomized to be ultra-fine, allowing them to be more easily absorbed through the skin, as normal steam particles are not small enough to be absorbed through the skin. These smaller particles allow your skin to become moisturized more quickly.

Parts

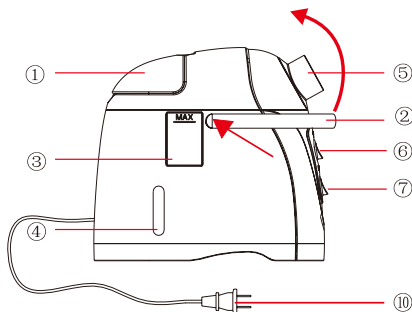


figure 1

- | | |
|--------------------------------|--------------------|
| ① Water shield | ⑥ Hot mist switch |
| ② Handle | ⑦ Cool mist switch |
| ③ Cool mist water level window | ⑧ Cool mist outlet |
| ④ Hot mist water level window | ⑨ Water cup |
| ⑤ Spraying nozzle | ⑩ Power plug |

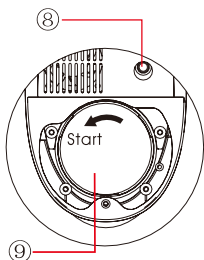


figure 2

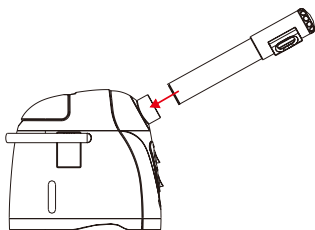


figure 3

Operating Instructions

1. First insert the handle (horizontal position as shown in figure 1) into the hole and turn into the location with moving up and down.
2. Check and confirm the hot mist cup (9) has been fastened and the end cap of the cool mist outlet (8) has been closed tightly.
3. Insert the spray rod into the main machine as shown in figure 3.
4. Open the water shield (1) and fill with clean water into the cool mist and hot mist tanks separately. Distilled water cannot be filled into the hot mist cup due to the water level probe inside.

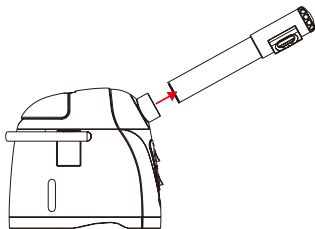


figure 4



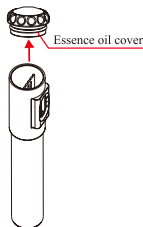


figure 5

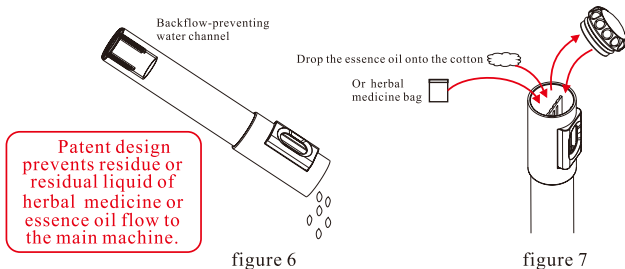




5. Plug in the steamer. When power is supplied, the blue light will illuminate the hot water tank.
6. If cool steam is required, please press cool mist switch (7) and cool mist will spray from the spray nozzle (5) immediately. Under normal conditions, the cool mist can be used for 20-25 minutes continuously when water is filled to the maximum level (3).
7. If you need to use the function of essence oil, follow these instructions:
 - a. Take out the steam rod from the main machine as shown in figure 4.
 - b. Take out the essence oil cover as shown in figure 5.
 - c. Please clean out the congealed return water, which remains in tube as shown in figure 6 (if the cool steam had been used).
 - d. The essence oil must be diluted with water before using, as shown in figure 7.
 - e. Insert the spray rod into the machine after covering the essence oil cover, turn on hot steam switch (6), the hot steam will spray from steam outlet (5) after 3 minutes.
 - f. Clean the spray rod after using any essential oil.
 - i. First remove the spray rod from the steamer.
 - ii. Take out the essential oil cover and remove the essential oil cotton. Pour out the residual water, by turning the rod over with the essential oil cup at the bottom and allowing the water to pour into the sink.
 - iii. Turn rod with the essential oil cup facing up and block off the end outlet of the spray rod with your hand and irrigate the location of essential oil under the tap to let the water outflow from the spray nozzle, as shown in figure 8.

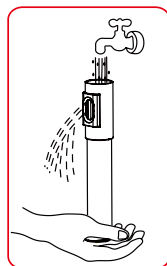


8. If you use the cool steam function only and not the essential oil function, there is no need to clean or pull out the steam rod.
9. The spray rod can rotate to all directions.
10. If you want a large spray, press both the hot and cool switches and warm steam will be produced.
11. To discharge remaining water in the tanks after using, open the cool steam outlet (8) and drain the water.

Operating Steps & Methods

1. Fill water into each tank separately. Use mineral water or tap water. The water level cannot exceed the highest water line and cannot go below the lowest water line.
2. Preheat. Press the switch and hot mist will be produced in 3-5 minutes. After the hot mist is produced, press the cool switch to produce the cool mist.
3. Adjust the distance. The mist of the steamer should spray from above the head downwards and the distance shall depend on the nature of the skin.
4. Use cool steam for 3-8 minutes under normal skin conditions. Depending on the dryness of your skin, more time may be required.

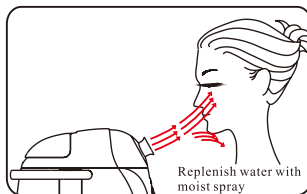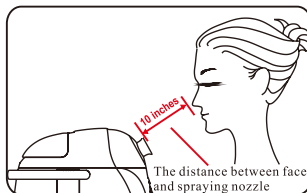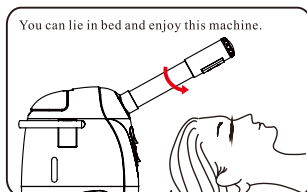


Water-adding

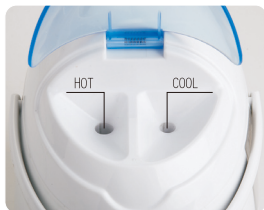

Tighten up the water container



Water level display window

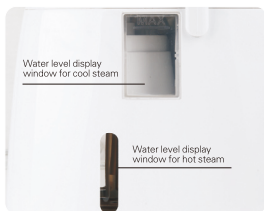

Instruction for using herbal medicine bag or cotton with essential oil



Insert the steam rod into the main equipment



The steam outlet can rotate to all directions along with the steam rod



Washing Methods

1. Remove the hot water tank and wash after every third or fifth use.
2. Take off the end cap of the cool mist tank and drain out the remaining water inside. In case of scale build-up, you may clean with a small amount of white vinegar.



Technical Parameters

Power: 400W

Rated voltage: 110-120V/50Hz

Net weight: 2.6 lbs

Safety Precautions

1. Please do not add essential oil or other products to the water tank. Dirty water may cause the water to spray rather than steam.
2. Please do not start the steamer with no water inside or if the water level is too low inside the hot water tank. Otherwise, the automatic alarm will cutoff the power to the steamer.
3. Ion spraying is not applicable for skin with color stains or rupture capillary vessels beneath the skin.
4. Please do not turn over or tilt steamer while in use.
5. Do not splash water onto plug or switch panel.
6. The hot water tank should be washed and replaced with new water each day. Before refilling with new water, unplug the steamer.
7. If you do not use the steam for a long time, drain the old water and replace with fresh water.
8. Add a few drops of white vinegar to the water tank before filling if the water tank is dirty and needs overnight soaking.
9. If the spray amount is not enough, the water may be too pure. You can add a few grains of salt to increase the electrolytes of the water so that the steamer can restore it to its normal condition.
10. Children, pregnant women or mentally challenged people should not use the steamer.
11. Please do not extend power cord or use additional plugs.



Manufacturer's Limited Warranty

The Manufacturer of Secura Facial Steamer warrants to the original purchaser of this product from an authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for 1 year after date of purchase. Manufacturer Secura Facial Steamer will, at its option, repair or replace with new or refurbished product. The manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the damaged product, and all costs of shipping the damaged product for inspection and warranty service shall be borne solely by the purchaser.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller. The warranty is not transferable, only the original purchaser is covered by this warranty.
2. This warranty is void when the product is used in a commercial or institutional use.
3. This warranty is void if the product has been subject to misuse, abuse, negligence, unauthorized modification or repair, or accident. Normal wear and tear are not covered by this warranty.
4. Purchaser must present acceptable proof of original receipt for the product.
5. This warranty does not affect any other legal rights you may have by operation of law.

Manufactured by
Secura Inc.
Brookfield, Wisconsin. USA



Copyright © 2010 – Secura Inc. - All rights are reserved.

www.thesecura.com