


ASD-500 Soap Dispenser Drive Belt Repair



Note: Be sure to turn the soap dispenser "off" or remove the batteries before starting the repair.


- Tools you will need:
1. Phillips screwdriver
 2. Small flat head screwdriver

ASD-500 Soap Dispenser Drive Belt Repair

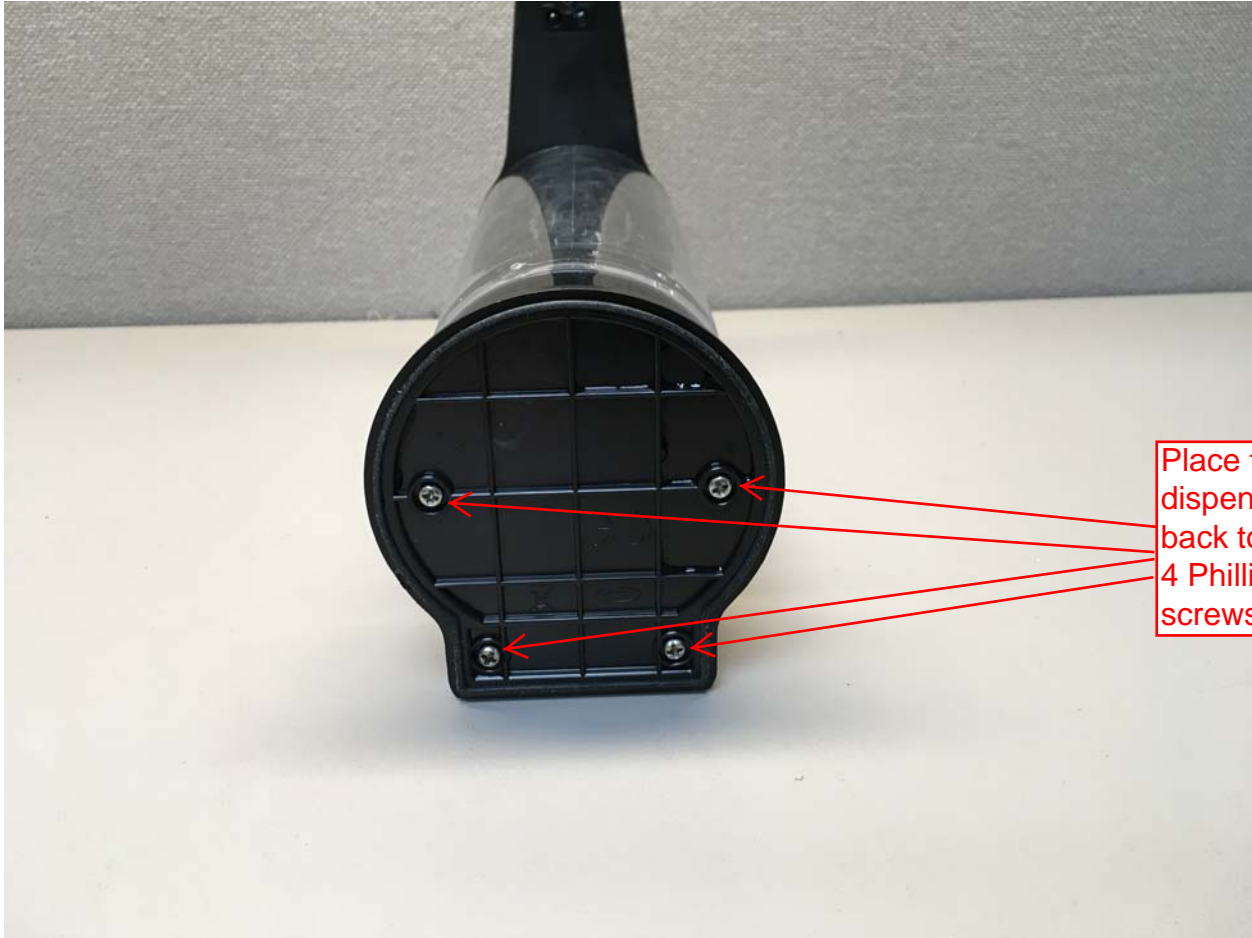

Place the soap dispenser on its back to locate the 4 Phillips head screws.

ASD-500 Soap Dispenser Drive Belt Repair

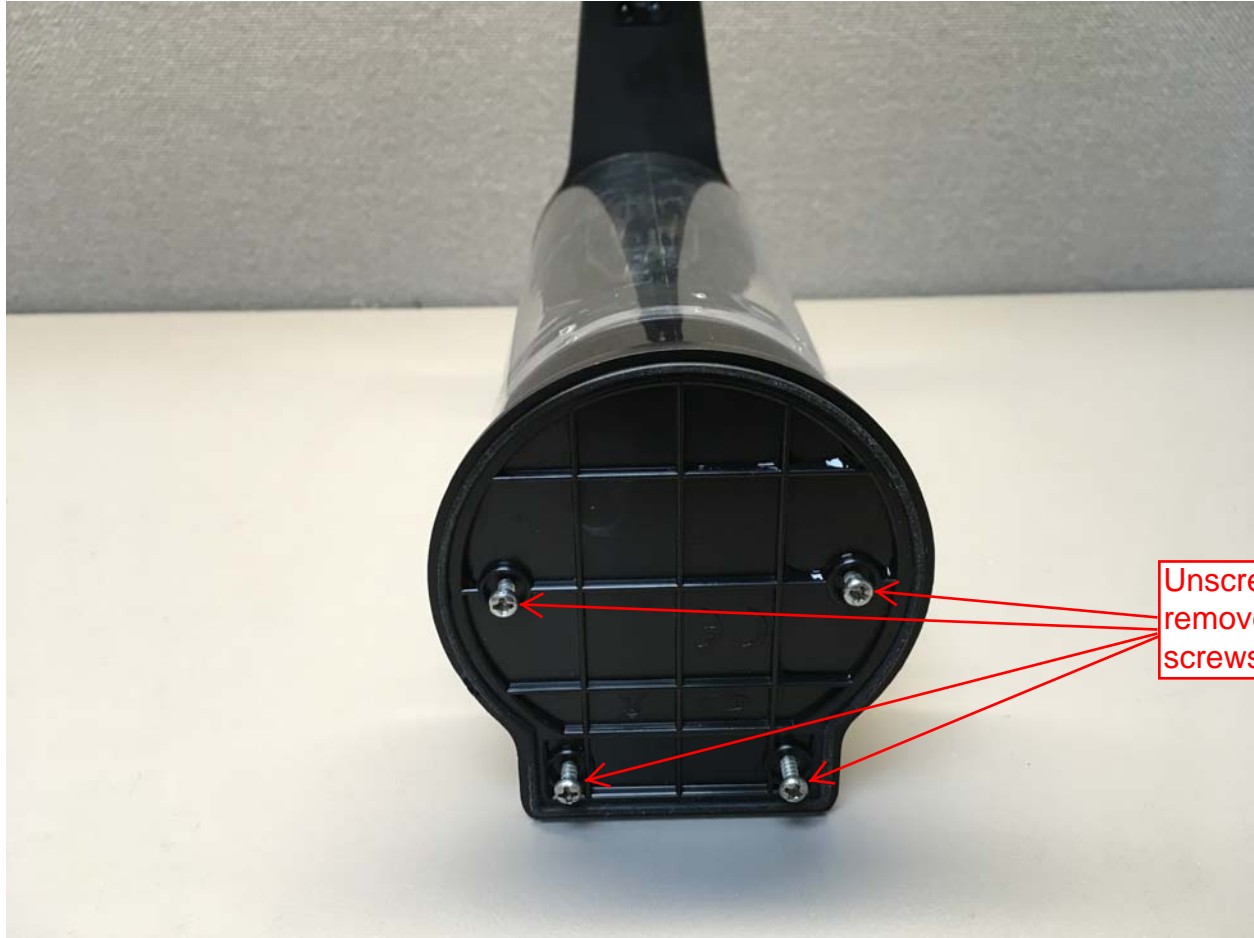


Unscrew and
remove the 4
screws.

ASD-500 Soap Dispenser Drive Belt Repair




Use the small flat head screwdriver to carefully pry the base off.

ASD-500 Soap Dispenser Drive Belt Repair

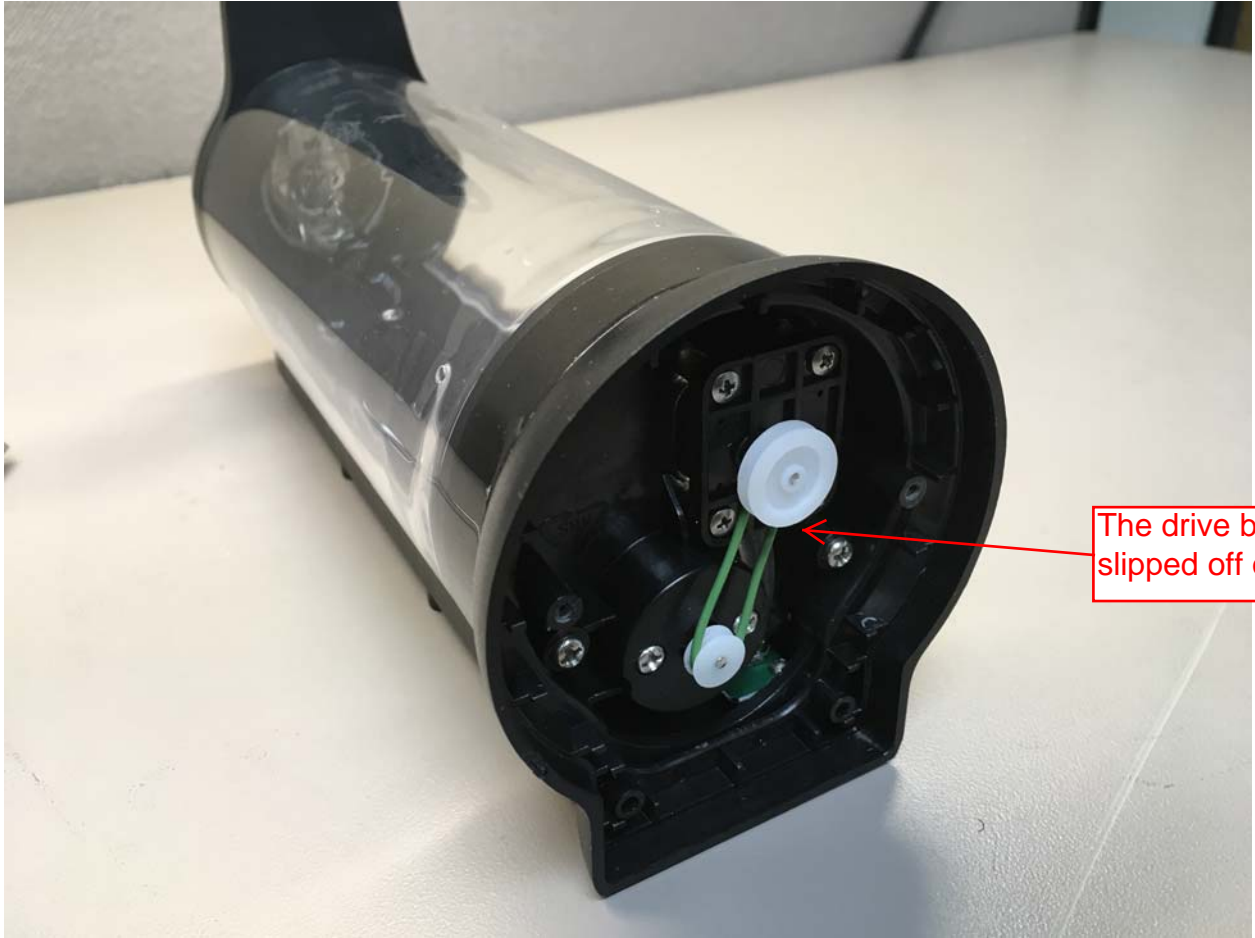


The drive belt has slipped off of the pulley.

ASD-500 Soap Dispenser Drive Belt Repair

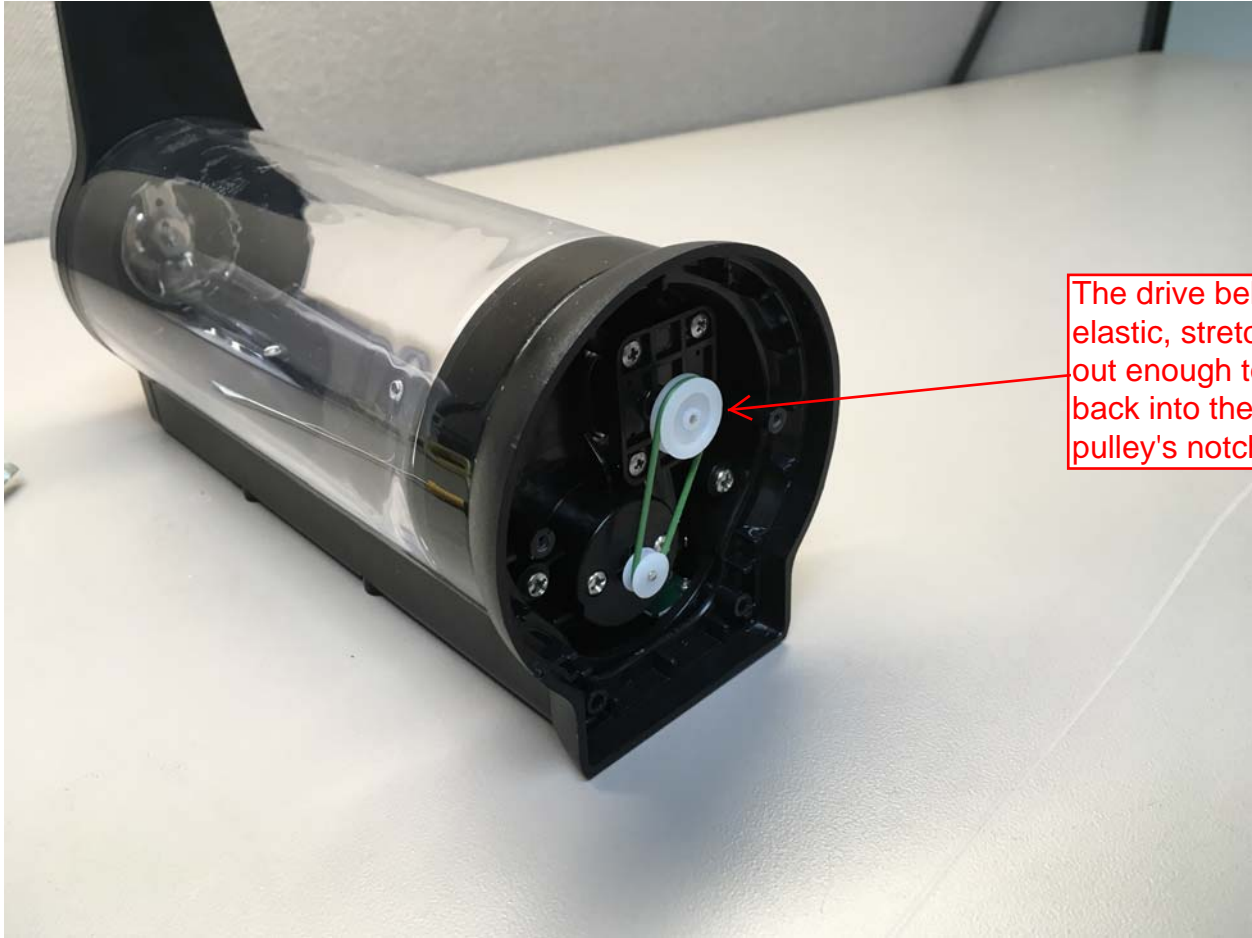


The drive belt is elastic, stretch it out enough to put it back into the pulley's notch.

ASD-500 Soap Dispenser Drive Belt Repair

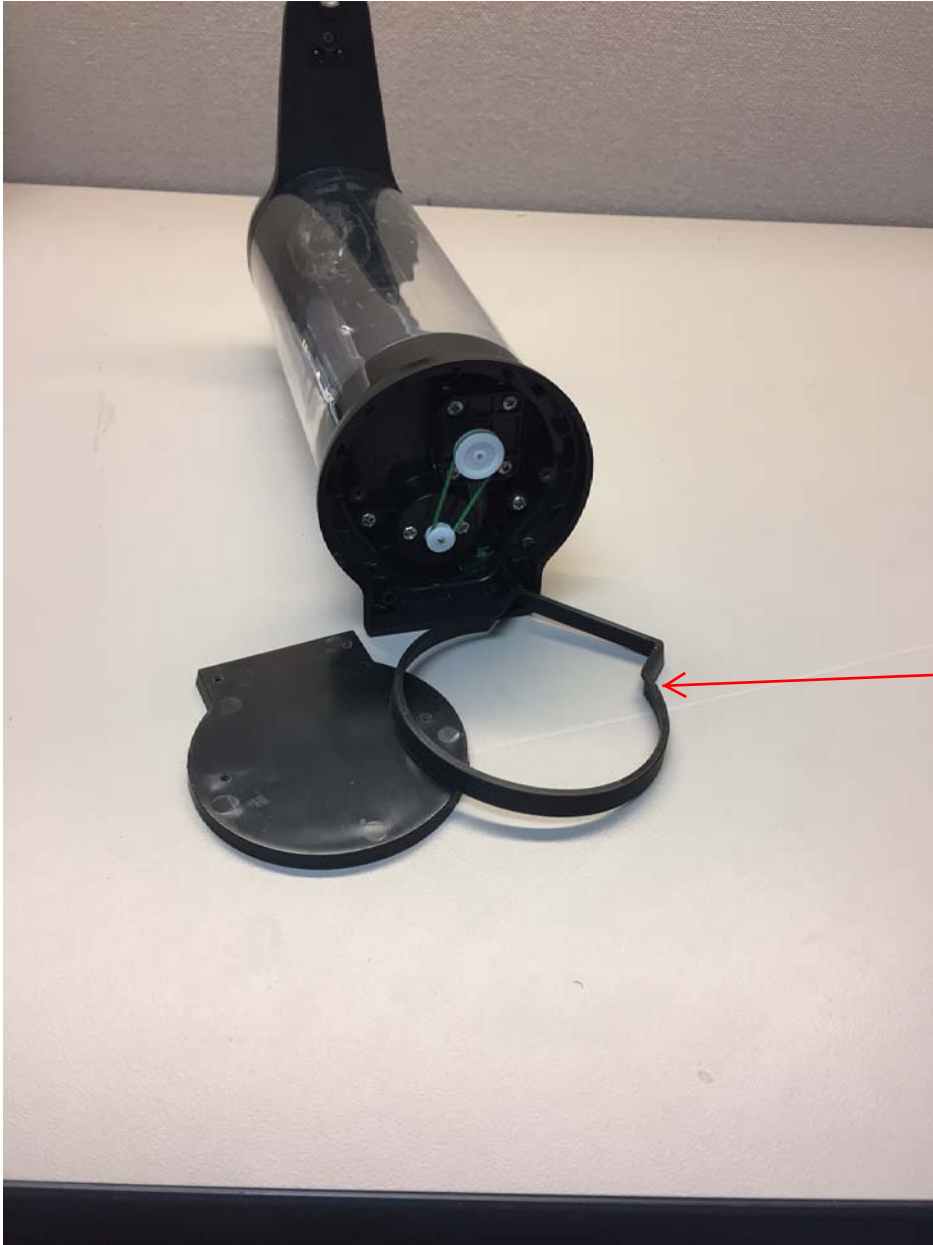

There is also a gasket located in the base to keep the dispenser water resistant. Make sure you replace it.

ASD-500 Soap Dispenser Drive Belt Repair

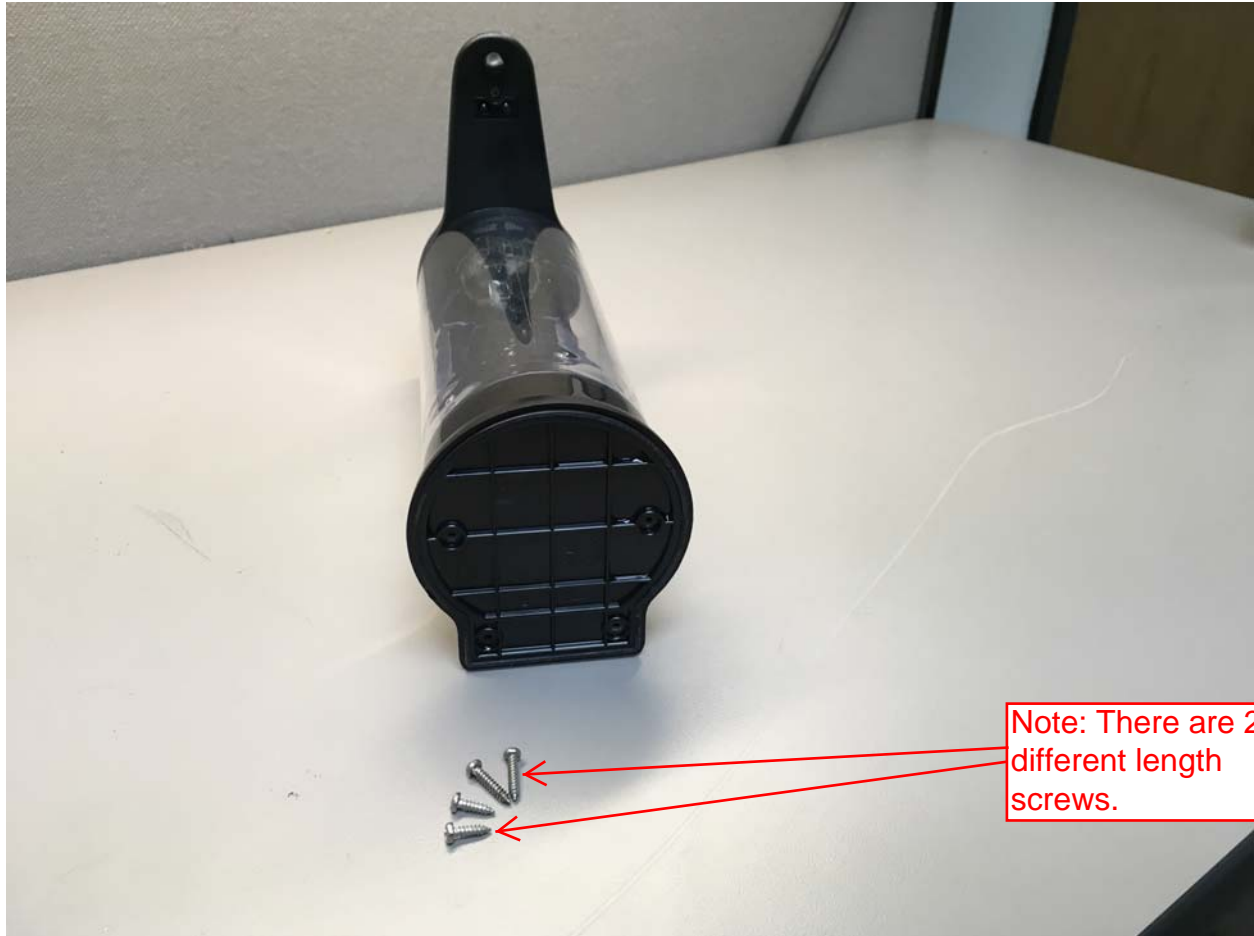

ASD-500 Soap Dispenser Drive Belt Repair

